

BCS3600^{ex}-NI Hand-held scanner

Accessories



It is absolutely necessary to use original accessories from BARTEC!

Accessories for use in hazardous areas

Accessories are approved for:

- ATEX: Zone 2/22 (EPS 16 ATEX 1 113 X)
- IECEx: Zone 2/22 (IECEx EPS 16.0050X)
- NEC: Class I, II, III Div. 2 (ETL 5012876)



Battery

Description	– for BCS3678 ^{ex} -NI Hand-held scanner – Lithium-Ion battery 3.6 V/3150 mAh (11.34 Wh) May only be changed and charged outside hazardous areas!
Order no.	B7-A2Z0-0036



Leather holster

Description	– for attachment to a belt or wall – Color: black
Order no.	17-A1Z0-0024



Connecting cable

Description	– Connection between supply module and BCS3608 ^{ex} -NI Hand-held scanner	
Order no.	1.9 m (plain)	17-A1Z0-0015
	4.5 m (plain)	17-A1Z0-0016
	2.7 m (spiral)	17-A1Z0-0017



HMI limiting cable

Description	– Connection between HMI and BCS3608 ^{ex} -NI Hand-held scanner – with open cable ends	
Order no.	1.9 m (plain), USB	B7-A2Z0-0041
	4.5 m (plain), USB	B7-A2Z0-0054

Accessories for use outside hazardous areas



4-slot battery charging station

Description	<ul style="list-style-type: none"> – for BCS3678^{ex}-NI Hand-held scanner – input voltage: DC 12 V (50 W) – Charging indicator via LED
Scope of delivery	4-slot battery charging station
Also required	(Not included in the delivery) <ul style="list-style-type: none"> – Power supply with DC connecting cable (G7-A0Z0-0019) – AC power cable
Order no.	G7-A0Z0-0013



Base station

Description	<ul style="list-style-type: none"> – for BCS3678^{ex}-NI Hand-held scanner – Input voltage: DC 12 V – Data synchronisation via Bluetooth, Supported interfaces (full functionality as specified by Zebra): USB + RS232 – Charging the battery inserted in the hand-held scanner – Charging function and charging indicator via LED – can be mounted on wall or table Operating mode: <ul style="list-style-type: none"> – Point-to-Point (1x scanner paired with 1x base station - default setting) – Multipoint-to-Point (7x scanners can be paired with 1x base station)
Scope of delivery	Base station
Also required	(Not included in the delivery) <ul style="list-style-type: none"> – Power supply with DC connecting cable (G7-A0Z0-0019) – AC power cable – Connecting cable (G7-A0Z0-****) * Connecting cable absolutely necessary between power supply and base station. Power supply cannot be connected directly to the base station.
Order no.	G7-A0Z0-0010



Programming cable USB

Description	<ul style="list-style-type: none"> – for programming BCS3608^{ex}-NI and BCS3678^{ex}-NI via PC – supports connection via USB only – 1.9 m (plain)
Scope of delivery	Programming cable USB
Also required	(Not included in the delivery) <ul style="list-style-type: none"> – Base station (when using the BCS3678^{ex}-NI)
Order no.	B7-A2Z0-0046



Connecting cable

Description	– for BCS3678 ^{EX} -NI Hand-held scanner – Connection between PC and base station – Cable with terminal for 12 V power supply	
Scope of delivery	Connecting cable	
Also required	(Not included in the delivery) – Power supply with DC connecting cable (G7-A0Z0-0019) – AC power cable	
Order no.	RS232: 2.0 m (plain)	G7-A0Z0-0014
	RS232: 4.6 m (plain)	G7-A0Z0-0015
	RS232: 2.8 m (spiral)	G7-A0Z0-0016
	USB: 2.0 m (plain)	G7-A0Z0-0018



Power supply with DC connecting cable

Description	– for 4-slot battery charging station and base station – Input voltage: AC 100 to 240 V – Output voltage: DC 12 V/4.16 A/50 W	
Order no.	G7-A0Z0-0019	



AC power cable

Description	– 3-wire – country-specific	
Order no.	Version: US + Canada	G7-A0Z0-0024
	Version: EU + APAC	G7-A0Z0-0026
	Version: Taiwan	G7-A0Z0-0027
	Please purchase the required country specific cables (with plug IEC-60320-C13) in the respective country!	



Special tool for lock nut

Description	– for BCS3678 ^{EX} Hand-held scanner – open and lock the safety lock nut on the battery compartment – 5 pieces	
Order no.	G7-A0Z0-0031	